



Located on the toolhousing are the model and serial numbers of your tool, please record these.
請您紀錄位於包裝盒上的工具型號與序號。

Model Number: _____
型號
Serial Number: _____
序號

WWW.BEXTOOL.COM

Made in Taiwan



USER MANUAL

使用說明書

CORDLESS 1/2" DRIVER-DRILL / HAMMER DRIVER-DRILL

鋰電無碳刷1/2"電鑽/震動電鑽





IMPROPER AND UNSAFE USE OF THIS TOOL WILL RESULT IN DEATH OR SERIOUS INJURY. IT IS VERY IMPORTANT THAT THE INTENDED OPERATOR OF THIS TOOL READS AND UNDERSTANDS THIS MANUAL BEFORE OPERATING THIS TOOL. KEEP THIS MANUAL AVAILABLE FOR OTHERS BEFORE THEY USE THE TOOL.



不當或不安全使用本工具可能導致死亡或嚴重傷害。
操作本工具的使用者務必在操作前仔細閱讀並理解本手冊內容。請將本手冊保留，供其他使用者在使用工具前參閱。

▲ **WARNING:** Please read the instructions and warnings for this tool carefully before use. Failure to do so could lead to serious injury.

▲ **重要事項:** 使用本工具前，請仔細閱讀操作說明與警告內容。
未遵守可能導致嚴重傷害。

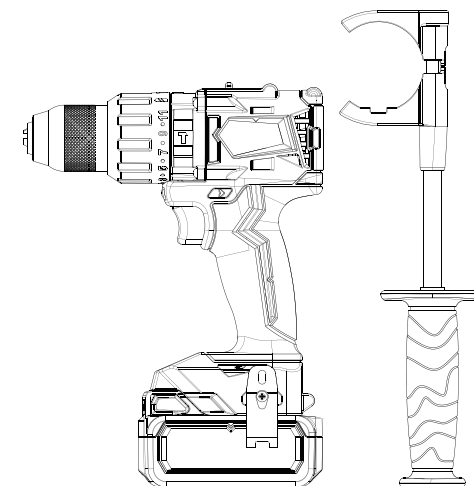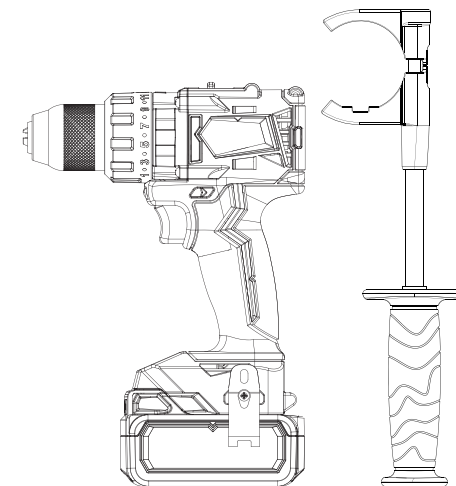

XD2120
HD2120H

Explanation of symbols

Wear eye protectors	Warning	Read instruction before use	Wear hearing protectors
			
Direct current	Rated Revolutions per Minute (RPM)	Volts	
D.C.	n XXXX min ⁻¹	V	

Mode No	XD2120	HD2120H
Sound pressure level (LpA)	78.2dB(A)	79.5dB(A)
Sound power level (LWA)	89.2dB(A)	90.5dB(A)
Uncertainty (K)	3dB(A)	3dB(A)
Vibration emission (ah)	1.68m/S ²	2.04m/S ²
Uncertainty (K)	1.5m/S ²	1.5m/S ²

NOTE : The declared noise emission value(s) has been measured in accordance with a standard test method and may be used for comparing one tool with another.

NOTE : The declared noise emission value(s) may also be used in a preliminary assessment of exposure.

- ▲ **WARNING : Wear ear protection**
- ▲ **WARNING : The noise emission during actual use of the power tool can differ from the declared value(s) depending on the ways in which the tool is used especially what kind of workpiece is processed.**
- ▲ **WARNING : Be sure to identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).**

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Table of content

General power tool safety Warning	03
Specific safety rules for DRILL/DRIVER	05
Specifications	05
Assembly and instruction	06
Operation	07
Battery Specification & Safety	08
Battery Charger Safety	11
Maintenance	13
Trouble shooting	14

General power tool safety Warning

▲ WARNING Read all safety warnings, instructions, illustrations and specifications. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Hold the power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring or its own cord. Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

General Power Tool Safety Warnings -Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

General Power Tool Safety Warnings

-Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.

- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (GFCI) protected supply.** Use of an GFCI reduces the risk of electric shock.

General Power Tool Safety Warnings- Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off- position before connecting to battery, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewelry or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

General Power Tool Safety Warnings- Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

General Power Tool Safety Warnings-Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it**

away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130°C may cause explosion.

g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

General Power Tool Safety Warnings-Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.


Specific safety rules for DRILL/DRIVER

- **Hold the power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring or its own cord.** Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- **Never operate at higher speed than the maximum speed rating of the drill bit.** At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the work piece, resulting in personal injury.
- **Always start drilling at low speed and with the bit tip in contact with the workpiece.** At higher speeds, the bit is likely to bend if allowed to rotate freely without contacting the workpiece, resulting in personal injury.
- **Wear ear protectors when impact drilling.** Exposure to noise can cause Hearing loss.
- **Use the auxiliary handle(s).** Loss of control can cause personal injury.

Specification


Model No		XD2120	HD2120H
No load speed	HIGH(2)	0 – 2000 rpm	0 – 2000 rpm
	LOW(1)	0 – 550 rpm	0 – 550 rpm
Hammer	BPM		32000
Drilling capacities	Steel	13mm	13mm
	Wood	89mm	89mm
	Cement		16mm
Fastening capacities	Machine screw	M6	M6
	Wood screw	10mm*90mm	10mm*90mm
Volts		18 V D.C.	18 V D.C.
Tool length		180mm	192mm
Tool weight		2.17 kg	2.23 kg
Battery type		EB18025-B1 EB18050-B1	EB18025-B1 EB18050-B1
Charger type		EC1800-B2	EC1800-B2

Functional Description

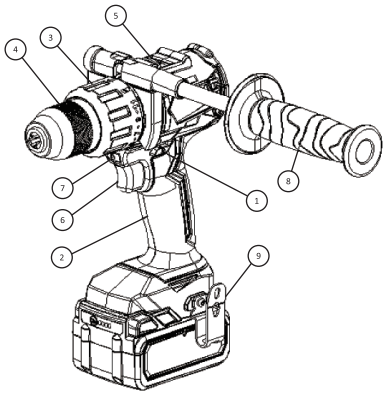

1	Control Switch
2	Handle
3	Torque selector collar
4	Keyless chuck
5	Speed selector
6	Trigger
7	LED
8	Auxiliary handle
9	Belt Clip


ASSEMBLY AND INSTRUCTION

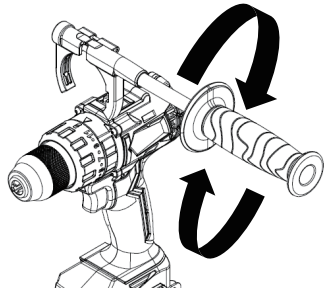

Always use the side grip to ensure operating safety. Insert the side grip so that the groove on the arm fit in one of the counter parts on the tool. Then tighten the grip by turning clockwise.
Depending the operations, you can install the side grip either right or left side of the tool.


Installing bit holder

Fit the bit holder into the protrusion at the tool foot on either right or left side and secure it with a screw. When not using the driver bit, keep it in the bit holders.

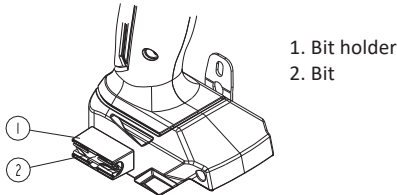

Hook

The hook is convenient for temporarily hanging the tool. This can be installed on either side of the tool. To install the hook, insert it into a groove in the tool housing on either side and then secure it with a screw. To remove, loosen the screw and then take it out.

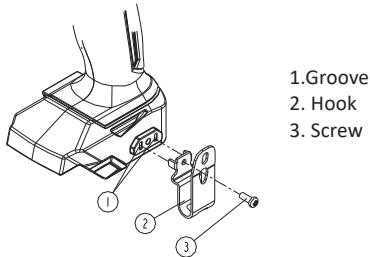

▲ Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with your charger and battery.

Removing/Inserting the Battery

To remove the battery, push in the release buttons and pull the battery pack away from the tool.

▲ Always remove battery pack before changing or removing accessories.

To insert the battery, slide the pack into the body of the tool. Make sure it latches securely into place.


▲ Always remove battery pack before changing or removing accessories.

Only use accessories specifically recommended for this tool. Others may be hazardous.

Installing and removing Accessories

Always remove the battery before inserting or removing bits. Select the proper style and size bit for the job.

1. To open the chuck jaws, turn the sleeve in the counterclockwise direction. When using drill bit, allow the bit to strike the bottom of the chuck. When using screwdriver bits, insert the bit far enough for the chuck jaws to grip the hex of the bit.
2. To close the chuck jaws, turn the sleeve in the clockwise direction. The bit is secure when the chuck makes a ratcheting sound and the sleeve can not be rotated any further.
3. To remove the bit, turn the sleeve in the counter-clockwise direction.

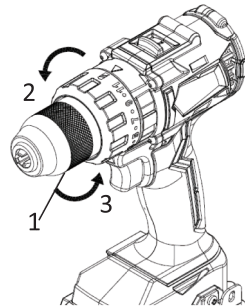


1. Sleeve 2. Close 3. Open


Operation

Selecting Drill or Drive Action


1. To use the drilling mode, rotate the torque selector collar until the drill symbol  appears in line with the arrow

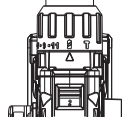

 2. To use the driving mode rotate the torque selector collar until the desired clutch setting appears in line with the arrow.



 3. To use the hammer drilling mode, rotate the torque selector collar until the hammer symbol  appears in line with the arrow. (HD2120H)



Selecting Speed


The speed selector is on top of the motor housing. Allow the tool to come to a complete stop before changing speeds.

1. For Low speed, push the speed selector to display "1".
2. For High speed, push the speed selector to display "2".

Note. The screwdriver function should be used at the second speed setting.


Drill Kickback stop protection

A Kickback Stop, also referred to as kickback control, is an accessory fitted to tools to protect users against sudden kickbacks. Kickback Stop function helps to detect if the tool abruptly kicks back or lifts. The motor is then stopped by emergency braking in order to avoid dangerous kickbacks.

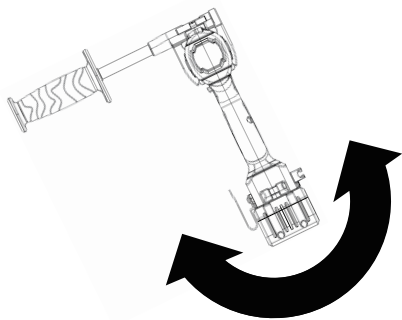

The Control Switch Button

The control switch may be set to three positions: forward, reverse and lock. Due to a lockout mechanism, the control switch can only be adjusted when the ON/OFF switch is not pressed. Always allow the motor to come to a complete stop before using the control switch.

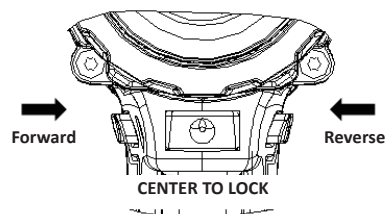

1. For **forward** (clockwise) rotation, push the control switch in the direction shown.

Check the direction of rotation before use.

2. For **reverse** (counterclockwise) rotation, push the direction shown.

Check the direction of rotation before use.

3. To **lock** the trigger, push the control switch to the center position. The trigger will not work when the control switch is in the locked position.

Always remove the battery pack before performing maintenance or changing accessories. Always lock the trigger or remove the battery pack before storing the tool and any time the tool is not in use.

BATTERY SPECIFICATION & SAFETY

EB18025-B1	
Rated Voltage	18V
Rated Capacity	2.5Ah
Cell type	Li-ion
Dimension	L x W x H 119x76x44 (mm)

EB18050-B1	
Rated Voltage	18V
Rated Capacity	5Ah
Cell type	Li-ion
Dimension	L x W x H 119x76x63 (mm)

■ Battery pack status :

Condition		LED Display
Overcurrent Protection	Automatically display the light number – four LED (10 flashes, Duty 2Hz)	
Overvoltage Protection	Automatically display the Light number – the first two LED (10 flashes, Duty 2Hz)	
Over Temperature Protection	Automatically display the light number – the last two LED (10 flashes, Duty 2Hz)	
Under Temperature Protection		
Single Cell abnormality	Automatically display the light number – the third fourth LED flashes alternately (Duty 2Hz, interactive flashing)	
Fuse Blow Out	Automatically display the light number – the first and last LED(10 flashes, Duty 2Hz)	
Short Current	Automatically display the light number – the first and third LED(10 flashes, Duty 2Hz)	
Under Discharge Voltage (Cell Voltage<2.6V)	Automatically display the light number – the second and fourth LED (10 flashes, Duty 2Hz)	
Deep Cell Voltage Permanent Failure (Cell Voltage<1.3V)	Automatically display the light number – The first and second LED (Duty 2Hz, interactive flashing)	

- Do not throw the battery into fire, nor heat the battery.
- Do not disassemble nor modify the battery Pack.
- Do not leave the battery in a place of high temperature. (60°C or more)
- To prevent the battery from water or moisture.
- Do not add strong shock, nor drop the battery.
- Do not solder lead directly to the battery body.
- Do not heat nor solder the terminals of the battery.
- Do not short “+” and “-” terminal of the battery with a kind of metal.
- Do not charge beyond the condition which described on the delivery specification.
- Do not reverse-charge or reverse-connect the battery.
- When recharging, use the battery charger specifically for that EC1800-B2.
- We suggest that the voltage of battery should not be lower than end voltage/cell when working and storing, or it may cause unrecoverable decay in its capacity.
- If the battery is stored over 3 months, it should be checked again about the remaining capacity and charge the battery.

Remarks: Please refer to the technical data sheet for the battery specifications.

CHARGER SPECIFICATION & STATUS

■ Battery Charger Specification

Battery Charger Specification	
Charger	EC1800-B2
Battery mode	EB18025-B1
	EB18050-B1
Output voltage	10~20.7±0.2V
Protection class	Electrical protection class II
AC supply voltage	100VAC~240VAC
Mains frequency	50Hz~60Hz
Operating Temperature	-10°C to 40°C
Storage Temperature	-40°C to 75°C

■ Battery Charger status

State of Charge indicator			
	State	Red LED	Green LED
1	Stand-by Mode	OFF	ON
2	Battery Pack Install And Charging	ON	OFF
3	Charging complete	OFF	ON
4	Temperature Error Protection	Red and Green LED flashes at the same time (Duty 1Hz)	
5	Over Charge Time	Red and Green LED flashes at the same time (Duty 1Hz)	
6	Abnormal Protection	Red and Green LED flashes alternately (Duty 1Hz)	
7	95% Full Charge	OFF	Green LED flashes (Duty 1Hz)

Battery Charger Safety

- **Keep work area clean and well lit.**
Cluttered and dark areas invite accidents.
- **Do not operate the appliance in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Chargers can cause sparks which may ignite dust or fumes.
- **Keep children and other persons away from the area while the charger is in use.**
- **The supply cord plug must match the outlet. Modification of the plug in any way is not permissible.** Unmodified plugs and corresponding power outlets reduce the risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not abuse the supply cord. Never use the supply cord to carry, pull or unplug the appliance. Keep the cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **Only use the battery charger in areas which are dry.** Water entering an electric appliance increases the risk of electric shock.
- **Use the charger only to charge the BASSO batteries approved for use with this charger.**
- **Do not use a charger if its casing or electric supply cord is defective.**
- **Store chargers out of reach of children when not in use. Do not allow persons unfamiliar with the appliance or these instructions to operate it.** Chargers are dangerous in the hands of untrained users.
- **Maintain the appliance carefully. Check to ensure that no parts are broken or damaged in such a way that the appliance can no longer function correctly. If damaged, have the appliance repaired before use.**

- **Use chargers and the corresponding batteries in accordance with these instructions and as is specified for this particular model.** Use of chargers for applications different from those intended could result in hazardous situations.
- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **When not in use, keep the battery and the charger away from paper clips, coins, keys, nails, screws or other small metal objects that could cause a short circuit at the battery terminals or the charging contacts.** A short circuit at the battery terminals or charging contacts could result in personal injury (burns) or fire.
- **Under abusive conditions, liquid may be ejected from the battery, avoid contact with the liquid. If contact accidentally occurs, flush with water. If the liquid comes into contact with the eyes also consult a doctor.** Liquids ejected from the battery may cause irritation or burns.
- **Take care to ensure that the charger is standing in a steady, secure position.** A falling battery or charger may present a risk of injury to yourself or others.
- **Avoid touching the contacts.**
- **Batteries that have reached the end of their life must be disposed of safely and correctly to avoid environmental pollution.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given super-vision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children must be instructed not to play with the appliance.**
- **Take care to ensure that the batteries suffer no mechanical damage**
- **Do not charge or continue to use damaged batteries (e.g. batteries with cracks, broken parts, bent or pushed-in and/or pulled-out contacts).**

-  **Do not touch the supply cord or extension cord if they are damaged while working. Disconnect the supply cord plug from the power outlet.** Damaged supply cords or extension cords present a risk of electric shock.
- **Never operate the appliance when it is dirty or wet.** Under unfavorable conditions, dampness or dust adhering to the surface of the appliance, especially dust from conductive materials, may present a risk of electric shock. Dirty or dusty appliances should thus be checked at a service center at regular intervals, especially if used frequently for working on conductive materials.

Maintenance

- ▲ **WARNING: To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the tool, battery pack or charger. Contact a Service facility for ALL repairs.**

Maintaining Tool

- Keep your tool, battery pack and charger in good repair by adopting a regular maintenance program. Inspect your tool for issues such as undue noise, misalignment or binding of moving parts, breakage of parts, or any other condition that may affect the tool operation. Return the tool, battery pack, and charger to a Service facility for repair.
- If the tool does not start or operate at full power with a fully charged battery pack, clean the contacts on the battery pack. If the tool still does not work properly return the tool, charger and battery pack, to a Service facility for repairs.

- ▲ **WARNING: To reduce the risk of personal injury and damage, never immerse your tool, battery pack or charger in liquid or allow a liquid to flow inside them.**

Cleaning

- Clean dust and debris from vents. Keep handles clean, dry and free of oil or grease.
- Use only mild soap and a damp cloth to clean, since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia.
- Never use flammable or combustible solvents around tools.

Repairs

For repairs, return the tool, battery pack and charger to the nearest service center.

Trouble Shooting

Symptom	Occurred abnormal	Trouble shooting
Continuously flash once, turn off the light for two seconds	■ Tool battery temperature protection ■ Tool motor temperature protection ■ Tool MOSFET temperature protection	■ Leave workpiece, wait until the temperature returns to operating temperature, and press the trigger. ■ Contact Service if the problem persists.
Continuously flash 2 times, turn off the light for two seconds	■ Battery high voltage ■ Battery low voltage ■ Abnormality inside the battery	■ Please remove the battery and contact the service department. ■ Fully charge the tool and press the trigger. ■ Leave workpiece, and press the trigger. ■ Contact Service if the problem persists.
Continuously flash 3 times, turn off the light for two seconds	■ Over current protection ■ Drill Kickback stop protection	■ Leave workpiece, and press the trigger. ■ Contact Service if the problem persists.
Continuously flash 4 times, turn off the light for two seconds	■ Tool stalled ■ Abnormal clutch	■ Please remove the battery and contact the service department.
For failure other than above situation, please stop using the tool and contact your local dealer for service.		

Tel:+886-4-2359-8877

Address:No. 24, 36th Road, Taichung Industrial Park

Taichung, Taiwan

符號說明

佩戴護目鏡	警告	使用前閱讀說明	佩戴聽力保護裝置
			
直流電	額定每分鐘轉速 (RPM)	伏特	
D.C.	n XXXX min ⁻¹	V	

型號	XD2120	HD2120H
聲壓級	78.2分貝(A)	79.5分貝(A)
聲功率級	89.2分貝(A)	90.5分貝(A)
不確定性的測量(K)	3分貝(A)	3分貝(A)
振動產生值(ah)	1.68m/S ²	2.04m/S ²
不確定性的測量(K)	1.5m/S ²	1.5m/S ²

注意：所聲明的噪音排放值是依據標準測試方法測得的，可用於比較不同工具之間的噪音等級。

注意：所聲明的噪音排放值亦可用於初步評估暴露情況。

- ▲ 警告：請佩戴聽力保護裝置。
- ▲ 警告：實際使用電動工具時的噪音排放可能會因工具的使用方式，尤其是加工的工件類型而與聲明值有所不同。
- ▲ 警告：確保根據實際使用條件(包括工具關閉時、空轉時以及觸發時的所有操作循環部分)估算暴露情況，制定保護操作員的安全措施。

聯邦通訊委員會(FCC)

本設備符合聯邦通訊委員會(FCC)規則第 15 部分。操作必須符合以下兩個條件：

- (1) 本設備不會造成有害干擾訊號，並且
- (2) 本設備必須接受任何接收到的干擾，包括可能導致操作不正常的干擾訊號。

目錄

一般電動工具安全警告	19
電鑽／起子機專用安全規則	20
規格	21
組裝與說明	22
操作	23
電池規格與安全使用事項	24
電池充電器安全使用事項	27
維護保養	28
故障排除	29

一般電動工具安全警告

▲警告：請閱讀所有的安全警告、使用說明、圖片和規格。未遵守以下所有的使用說明可能導致觸電、引發火災或造成嚴重受傷。請保留所有的警告和使用說明以供日後參考。

在警告中，「電動工具」指的是您的插電式電動工具或電池式電動工具。

在進行緊固件可能接觸到隱藏的電線或自身電線的操作時，請握住絕緣的握把表面來使用電動工具。緊固件接觸到「帶電」的電線可能會使電動工具的裸露金屬部分「通電」，並可能會使操作人員觸電。

一般電動工具安全警告-工作場地安全

- a) 保持工作區域清潔且良好照明。雜亂或昏暗的區域容易引發事故。
- b) 請勿在易爆炸環境中操作電動工具，例如存有易燃液體、氣體或粉塵的地方。電動工具會產生火花，可能引燃粉塵或煙霧。
- c) 操作電動工具時，請讓兒童和旁觀者遠離。分心可能讓您無法安全操作工具。

一般電動工具安全警告-用電安全

- a) 請勿以任何方式修改插頭，電動工具的插頭必須與插座相匹配。需接地的電動工具不能使用任何轉接插頭。未經修改的插頭和匹配的插座能降低電擊危險。
 - b) 避免身體與接地的表面(如管道、散熱器、爐具和冰箱)接觸。如果接觸接地的表面，會增加電擊危險。
 - c) 不要將電動工具暴露於雨水或潮濕環境中。若有水進入電動工具會增加電擊危險。
 - d) 不得以錯誤方式使用電源線。切勿使用電線進行搬運、拉扯或拔出電動工具。電線應遠離熱源、油、鋒利邊緣或活動零件。損壞或纏繞的電線會增加電擊危險。
 - e) 在戶外操作電動工具時，請使用適合戶外使用的延長線。使用戶外專用的電線可以降低觸電的風險。
 - f) 若無法避免在潮濕的地方操作電動工具，請使用漏電保護裝置(GFCI)。
- 使用GFCI可降低觸電的風險。

一般電動工具安全警告：人身安全

- a) 在操作電動工具時，請保持警覺，依據常識判斷當下作業需求和環境。不要在疲倦或受藥物、酒精或藥品影響時使用電動工具。在操作電動工具時，瞬間的疏忽可能導致嚴重人身傷害。

b) 請使用個人防護設備，並始終佩戴護目鏡。在適當條件下佩戴防塵口罩、穿上防滑安全鞋、戴安全帽或聽力保護裝備等防護設備，可以有效減少人身傷害。

c) 防止工具意外啟動。在連接電池、拿起工具，搬運工具前，請確保開關處於關閉狀態。搬運電動工具時手指放在開關上或開關處於通電狀態時容易引發事故。

d) 在電動工具接通之前，取下所有定位鍵或扳手。遺留在電動工具旋轉零件上的扳手或定位鍵有可能會導致人身傷害。

e) 請避免伸手去拿取工具。時刻注意立足點和身體平衡。以確保在意外情況下能妥善控制電動工具。

f) 著裝適當。不要穿著寬鬆衣物或佩戴飾品。請將頭髮、衣物和手套遠離活動零件。寬鬆衣物、飾品或長髮可能會捲入活動零件當中。

g) 如果提供了與排屑、集塵設備連接用的裝置，要確保他們連接完好且使用得當。使用集塵設備可減少因塵屑引起的危險。

h) 請勿因頻繁使用本工具而自認熟練導致您大意輕忽工具的安全原則。一時的疏忽隨即會造成人身重傷。

一般電動工具安全警告-電動工具使用和注意事項

- a) 使用電動工具時請勿用蠻力。根據用途使用適當的電動工具。選擇具有適當設計額定值的電動工具使您工作更有效率、更安全。
- b) 如果電動工具的開關無法接通或關閉，請勿使用該工具。任何無法通過開關控制的電動工具都是危險的，且必須進行修理。
- c) 在進行任何調整、更換配件或貯存電動工具之前，請先將插頭從電源上拔掉，或將電池組從電動工具上取下。這些預防性安全措施能降低意外啟動電動工具的危險。
- d) 閒置的電動工具貯存在兒童無法拿到的地方，並且不要讓不熟悉該電動工具或對這些說明不了解的人操作它。讓未經訓練的使用者操作電動工具是相當危險的。
- e) 保養電動工具。檢查活動零件是否對準或卡住，零件是否損壞，以及其他可能影響電動工具運轉的情況。如果發現損壞，請在使用前進行修理。許多事故都是由於電動工具維護不善所造成的。
- f) 保持切削刀具鋒利和清潔。保養良好的有鋒利切削刀的刀具不易被卡住而且容易控制。
- g) 按照使用說明書，考慮作業條件和進行的作業來使用電動工具、配件和工具的刀頭等。將電動工具用於那些與其用途不符的操作可能會導致危險。
- h) 把手及握持區應保持乾燥、潔淨，且不得沾染任何油液或油脂。易滑脫的把手及握持區將無法讓您在發生意外狀況時安全地抓緊並控制工具。

一般電動工具安全警告-電池式工具使用和注意事項

- a) 僅使用原廠指定的充電器充電。適用於一種電池組的充電器，若用到其他電池組，可能會引發火災風險。
- b) 只有在配有專用電池組的情況下才使用電動工具。使用其他電池組可能會發生損壞和火災風險。
- c) 當電池組未使用時，請將其遠離其他金屬物品，如迴紋針、硬幣、鑰匙、釘子、螺絲或其他小型金屬物品，以防一端與另一端連接。電池端部短路會引起燃燒或火災。
- d) 在不當的使用情況下，電池可能會釋放液體，請避免接觸之。如不慎接觸，請用清水沖洗。如液體接觸眼睛，請立即就醫。電池釋放的液體可能會引起刺激或灼傷。
- e) 請勿使用損壞或改裝過的電池組或工具。損壞或改裝過的電池可能會出現無法預期的反應，導致火災、爆炸或人身受傷風險。
- f) 請勿將電池組或工具暴露於火源或高溫環境中。暴露於火源或高於130°C的溫度可能會導致爆炸。
- g) 請遵循所有充電指示，並勿在說明書指定的溫度範圍外對電池組或工具進行充電。不當充電或在超出指定溫度範圍內充電，可能會損壞電池並增加火災風險。

一般電動工具安全警告-維修

- a) 請由合格的維修人員使用相同的替代零件來維修您的電動工具。這將確保所維修的電動工具的安全性。
- b) 請勿自行維修已損壞的電池組。電池組的維修應僅由原廠或授權服務商來進行維修。


電鑽／起子機專用安全規則

- 在進行緊固件可能接觸到隱藏的電線或自身電線的操作時，請握住絕緣的握把表面來使用電動工具。緊固件接觸到「帶電」的電線可能會使電動工具的裸露金屬部分「通電」，並可能會使操作人員觸電。
- 請勿以超過電鑽鑽頭最大速度等級的速度操作。在較高的速度下，如果鑽頭可以在不接觸工件的情況下自由旋轉，則可能會彎曲，導致人身傷害。
- 始終以低速啟動鑽孔，並確保鑽頭尖端與工件接觸。在較高的速度下，如果鑽頭可以在不接觸工件的情況下自由旋轉，則可能會彎曲，導致人身傷害。
- 在進行衝擊鑽孔時，請佩戴耳罩。接觸噪音可能會導致聽力受損。
- 使用輔助握把。失去控制可能會導致人身傷害。

規格


型號		XD2120	HD2120H
空載轉速	高 (2)	0 – 2000 rpm	0 – 2000 rpm
	低 (1)	0 – 550 rpm	0 – 550 rpm
每分鐘錘擊數	BPM		32000
鑽孔能力	鋼材	13 mm	13 mm
	木材	89 mm	89 mm
	水泥		16 mm
緊固能力	機械牙螺絲	M6	M6
	木螺絲	10 mm*90 mm	10 mm*90 mm
伏特		18V 直流電	18V 直流電
全長		180 mm	192 mm
工具重量		2.17 kg	2.23 kg
電池種類		EB18025-B1 EB18050-B1	EB18025-B1 EB18050-B1
充電器類型		EC1800-B2	EC1800-B2

功能描述

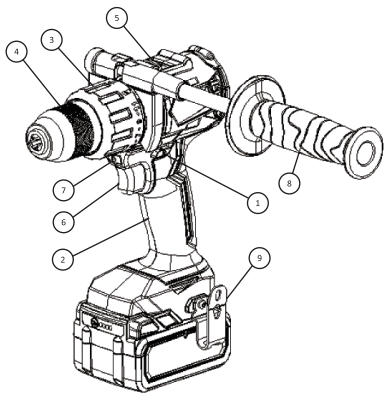

1	正反轉切換鈕
2	握把
3	扭力調整環
4	夾頭
5	速度調整器
6	扳機
7	LED燈
8	輔助握把
9	掛鉤


組裝與說明

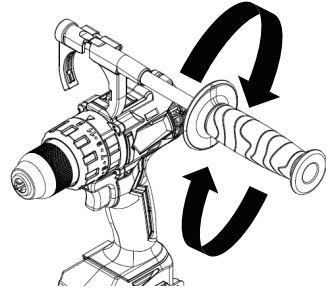

為了確保操作安全，請始終使用輔助握把。
將輔助握把置入，使其臂部凹槽與工具上的對應零件對齊。然後順時針旋轉以擰緊握把。
根據操作需求，您可以將輔助握把安裝在工具的右側或左側。


安裝起子頭夾持座

將鑽頭夾持器嵌入工具底座左側或右側的突起中，並用螺絲加以緊固。不使用起子頭/鑽頭時，可將其存放在起子頭夾持座內。

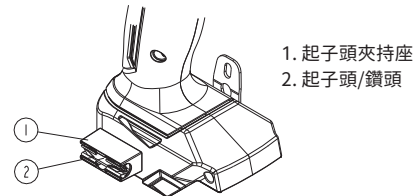

掛鉤

掛鉤便於臨時懸掛工具。可安裝在工具的任一側。
要安裝掛鉤，請將其插入工具外殼上任一側的凹槽中，然後用螺絲加以緊固。要拆卸掛鉤，請將螺絲擰鬆，然後將其取出。

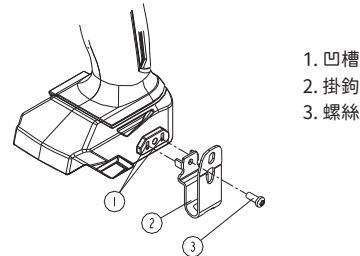


- ▲ 僅使用指定的充電器為電池進行充電。有關具體的充電說明，請閱讀與充電器和電池一起提供的操作手冊。
- 移除/安裝電池
如要移除電池，請按下釋放鈕，再將電池組移除。
- ▲ 如要更換或移除配件，請先取出電池組。
如要安裝電池，將電池插入工具。請確保電池已安裝完畢。
- ▲ 在更換或移除配件之前，務必先移除電池組。
僅使用本工具適用的配件，其他不相容之配件可能會帶來危險。

安裝和移除配件

在插入或拆卸鑽頭前，請務必先移除電池。
選擇適合的鑽頭款式和尺寸。

- 要打開夾頭時，請逆時針旋轉夾頭環。
使用鑽頭時，將鑽頭推到夾頭底部。使用螺絲槍鑽頭時，將鑽頭插到最底，以便夾頭夾住頭部的六角部分。
- 要關閉夾頭時，請順時針旋轉夾頭環。當夾頭發出齒輪聲並且夾頭環無法再旋轉時，代表鑽頭已安全固定。
- 要拆下鑽頭時，請逆時針旋轉夾頭環。

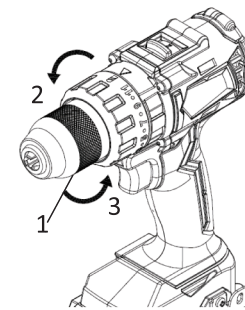


1. 套筒 2. 關閉 3. 打開


操作

選擇鑽孔或扭矩調節動作模式


1. 使用鑽孔模式，請旋轉扭力調節環，直到鑽孔符號  與箭頭對齊。

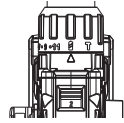

 2. 要使用扭矩調節模式，請旋轉扭力調節環，直到所需的離合設定與箭頭對齊。



 3. 使用震動鑽孔模式，請旋轉扭力調節環，直到震動鑽孔符號  與箭頭對齊。
(HD2120H)



速度調整


速度調整器位於電動機外殼的上方。

變速操作前，請將工具完全關閉。

- 若要選擇低速，請按下速度調整器以顯示“1”。
 - 若要選擇高速，請按下速度調整器以顯示“2”。
- 注意：**螺絲起子功能應在段速2設置下使用。


防拐手保護裝置

防拐手保護裝置，也稱為反衝保護控制，是安裝在工具上的配件，旨在保護使用者免受突然的反衝影響。防拐手功能可以檢測工具是否突然反衝或過度旋轉，然後通過緊急制動停止馬達，以避免危險的拐手情況。

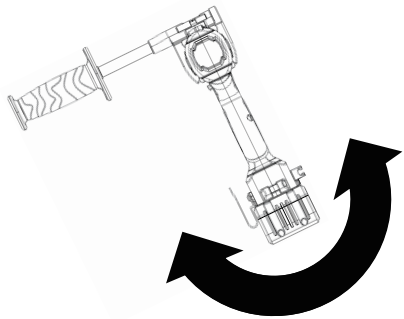

正反轉切換鈕

切換鈕可推至三個位置：正轉、反轉和鎖定。由於鎖定機制，只有在未啟動工具時才能調整切換鈕。在使用切換鈕前，請務必確認馬達已完全停止。

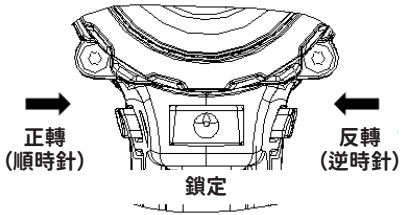

- 1.若要**正轉**（順時針）旋轉，請將切換鈕推向所示方向。**使用前請檢查旋轉方向。**
- 2.若要**反轉**（逆時針）旋轉，請將切換鈕推向所示方向。**使用前請檢查旋轉方向。**
- 3.若要**鎖定**扳機，將控制開關正反轉切換鈕推到置中。當切換鈕處於鎖定位置時，扳機將無法運作。

需保養或更換配件之前，務必請先移除電池組；閒置或未使用工具時，請務必鎖定扳機或移除電池組。

電池規格與安全使用事項

EB18025-B1	
額定電壓	18V
額定容量	2.5Ah
電池類型	鋰離子
尺寸	長 x 寬 x 高 119 x 76 x 44 (mm)

EB18050-B1	
額定電壓	18V
額定容量	5Ah
電池類型	鋰離子
尺寸	長 x 寬 x 高 119 x 76 x 63 (mm)

■ 電池組狀態：

條件		LED 顯示
過電流保護	顯示燈狀態：四顆LED全亮（閃爍10次，頻率2Hz）	
過電壓保護	顯示燈狀態：前兩顆LED亮起（閃爍10次，頻率2Hz）	
過熱保護	顯示燈狀態：後兩顆LED亮起（閃爍10次，頻率2Hz）	
過冷保護		
單一電芯異常	顯示燈狀態：第三、四顆LED交互亮起（頻率2Hz，交互閃爍）	
保險絲熔斷	顯示燈狀態：第一、最後一顆LED亮起（閃爍10次，頻率2Hz）	
短路	顯示燈狀態：第一、第三顆LED亮起（閃爍10次，頻率2Hz）	
低於放電電壓（電池電壓<2.6V）	顯示燈狀態：第二、第四顆LED亮起（閃爍10次，頻率2Hz）	
深層電池電壓永久故障（電池電壓<1.3V）	顯示燈狀態：第一、第二顆LED亮起（頻率2Hz，交互閃爍）	

- 請勿將電池燒掉，也不要將電池拿去加熱。
- 請勿拆卸或重組電池組。
- 請勿將電池放在高溫的地方（60°C 或以上）
- 請勿讓電池受潮或碰水。
- 請勿讓電池受到大力撞擊，也不要讓電池落地。
- 請勿直接將鉛焊接到電池本體。
- 請勿加熱或焊接電池的端子。
- 請勿使電池正、負端子短路。
- 請遵守運送規則上所述的條件。
- 請勿反向充電或逆向連接電池。
- 充電時，請用EC1800-B2專用電池充電器。
- 在使用和儲存時，當電池電壓低於開路電壓時，電池容量可能會下降，且無法恢復。
- 如果電池放置時間超過3個月，應再次檢查剩餘容量並為電池充電。

備註：請參閱電池規格說明書。

充電器規格&狀態

■ 電池充電器規格

電池充電器規格	
充電器	EC1800-B2
電池模式	EB18025-B1
	EB18050-B1
輸出電壓	10~20.7±0.2V
保護等級	觸電防止保護等級II
交流供電電壓	100VAC~240VAC
主要頻率	50Hz~60Hz
作業溫度	-10°C 至 40°C
儲存溫度	-40°C 至 75°C

■ 電池充電器狀態

充電狀態指標			
	狀態	LED紅燈	LED綠燈
1	待機狀態	關閉	開啟
2	電池組安裝和充電	開啟	關閉
3	充電完成	關閉	開啟
4	溫度錯誤保護	LED紅、綠燈同時閃爍 (頻率1Hz)	
5	充電時間過長	LED紅、綠燈同時閃爍 (頻率1Hz)	
6	異常保護	LED紅、綠燈交互閃爍 (頻率1Hz)	
7	95%充電完成	關閉	LED綠燈閃爍 (頻率1Hz)

電池充電器安全使用事項

- 請保持工作區乾淨且明亮。雜亂或黑暗的區域容易發生意外。
- 請勿在易爆炸環境中充電，例如存有易燃液體、氣體或粉塵的環境。充電過程會產生火花，可能引燃粉塵或煙霧。
- 充電時，請讓兒童和人群遠離充電區域。
- 電源線插頭需與插座相匹配。請勿使用以任何方式改造的插頭。相應的插頭和插座可降低觸電風險。
- 避免身體與接地的表面(如管道、散熱器、爐具和冰箱)接觸。如果身體接地，會增加電擊危險。
- 不得以錯誤方式使用電源線。請勿使用電源線進行搬運、拉扯或拔出電動工具。電源線應遠離熱源、油、鋒利邊緣或活動部件。損壞或纏繞的電線會增加觸電危險。
- 請只在乾燥的地方進行充電。電器受潮會增加觸電風險。
- 僅使用原廠出品對應的充電器為對應的電池充電。
- 請勿使用缺陷損壞的充電器或電源線。
- 充電器未使用時，請放置於兒童拿不到的地方。請勿讓不熟悉此設備或本說明書的人操作，以免發生危險。
- 請小心維護保養此產品。檢查確保沒有任何零件損壞或損毀以至於無法正常運轉。如果有損壞，請在使用前送修完畢。
- 請依照本說明使用充電器和相應電池，並且符合此型號之規定。以免使用不相容的充電器導致發生危險。
- 僅使用原廠指定的充電器進行充電。適用於一種電池組的充電器，若用於其他電池組，可能會引發火災風險。
- 不使用時，請將電池和充電器遠離迴紋針、硬幣、鑰匙、釘子、螺絲或其他可能導致電池端子或充電接觸點短路的小金屬物體。電池端子或充電接觸點的短路可能導致人身傷害(燒傷)或引起火災。
- 在不當使用情況下，電池可能會釋放液體；請避免接觸。如不慎接觸，請用水沖洗。如液體接觸眼睛，請立即就醫。電池釋放的液體可能會引起刺激或灼傷。
- 請確保充電器放在定、安全的位置。不當擺放電池或充電器造成掉落可能會對您或他人造成傷害。
- 避免觸碰接點。
- 為避免環境污染，請務必妥善地處理廢電池。

- 身體、感官或心智能力受限、缺乏經驗和知識的人(包括兒童)不適合用本產品，除非他們在監督或指導之狀況下使用之。
- 請教育兒童不應隨意把玩此產品。
- 請小心確保電池不受機械損傷。
- 請勿充電或繼續使用損壞的電池(例如有裂痕、破損、彎曲或壓入或拉出接點的電池)。
-  在工作時，如果電源線或延長線損壞，請勿觸碰。請將電源線插頭拔掉。損壞的電源線或延長線可能會使您觸電。
- 請勿在使用髒污或受潮設備。在不當情況下，附著在設備表面上的水氣或灰塵，尤其是導電材料上的灰塵，可能會造成觸電風險。因此，有髒污或灰塵之設備應定期送去服務中心進行檢查，尤其是在頻繁使用導電材料之設備。

維護保養

▲警告：爲了降低傷害風險，在進行任何維護保養工作前，請務必拔掉充電器插頭並將充電器或工具的電池組取出。請勿拆解工具、電池組或充電器。聯絡售服中心進行所有維修。

維護工具

- 定期維護設備，確保工具、電池組和充電器的狀態良好。檢查工具是否有異常噪音、零件對不準、活動零件卡住、零件損壞或任何其他可能影響工具運作的情況。如有問題，將工具、電池組和充電器送回售服中心維修。
- 如果工具無法啟動或使用完全充電的電池組時無法達到全功率，請清潔電池組上的接觸點。如果工具仍然無法正常運作，請將工具、充電器和電池組送回售服中心。

▲警告：爲了降低傷害和損壞率，請勿讓工具、電池組或充電器泡水或受潮。

清潔

- 清潔通風孔上的灰塵和碎屑。保持手柄乾淨、乾燥，並且無油或油脂。
- 僅使用溫和的肥皂和濕布進行清潔，因爲某些清潔劑和溶劑對塑料和其他絕緣部件有害。例如汽油、松節油、清漆稀釋劑、油漆稀釋劑、氯化清潔劑、氨水以及含氨的家用清潔劑。
- 請勿在工具周圍使用易燃或可燃的溶劑。

維修

如需維修，請將工具、電池組和充電器送至最近的售服中心。

故障排除

異常提示	發生異常	故障排除
持續閃爍一次，然後熄燈兩秒。	■ 工具電池溫度保護。 ■ 工具馬達溫度保護。 ■ 工具 MOSFET 溫度保護。	■ 停止操作工件，等待溫度恢復至可操作範圍後，再扣動扳機。 ■ 若問題仍然存在，請聯繫售服中心。
持續閃爍兩次，然後熄燈兩秒。	■ 電池電壓過高。 ■ 電池電壓過低。 ■ 電池內部異常。	■ 請取下電池並聯繫售服中心。 ■ 請將工具充滿電，然後扣動扳機。 ■ 停止操作工件，然後扣動扳機。 ■ 若問題仍然存在，請聯繫售服中心。
持續閃爍三次，然後熄燈兩秒。	■ 過電流保護。 ■ 防拐手保護裝置。	■ 停止操作工件，然後扣動扳機。 ■ 若問題仍然存在，請聯繫售服中心。
持續閃爍四次，然後熄燈兩秒。	■ 工具停止運作。 ■ 離合器異常。	■ 請取下電池並聯繫售服中心。
若出現上述情況以外的故障，請立即停止使用工具並聯繫當地經銷商尋求服務。		

電話:+886-4-2359-8877
地址:臺中市西屯區工業區36路24號